


removing - refitting : accessories drive belt INJECTION ES9J4

N.B. : The accessory drive belt is tensioned automatically by the dynamic tensioner.

1 Removing

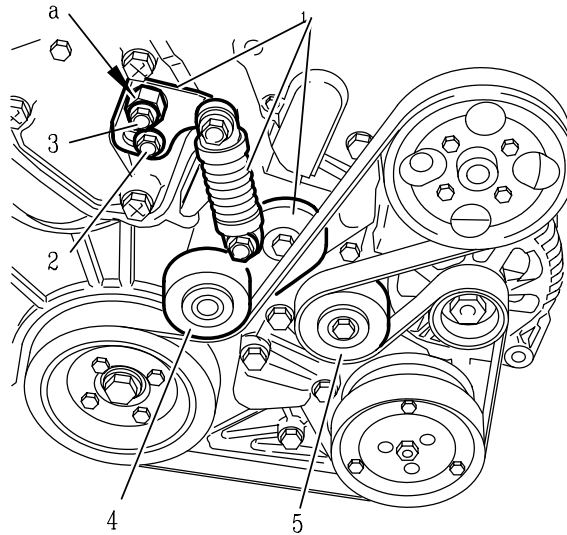

- Fig. : 1 -

Slacken bolt (3).

Disengage the shoulder of the bolt (2) from the oblong hole in the dynamic tensioner.

Release the dynamic tensioner (1) using the hexagon " a ".

Remove the auxiliary equipment drive belt.

N.B. : Check that rollers (4) and (5) rotate freely (no tight spot).

2 Refitting

Reinstall the auxiliary equipment drive belt.

N.B. : Check that the belt is correctly located in the grooves of the various pulleys.

Bring the dynamic tensioner (1) into its operating position using the hexagon " a " .

Tighten the screw (2) to 2,5 m.daN.

Tighten the screw (3) to 2,5 m.daN.