


removing - refitting : the reduction motor ELECTRIC SUN ROOF

1 Removing

N.B. : The reduction motor is to be removed with the moving panel closed.


Open the bonnet.

Disconnect the battery negative terminal.

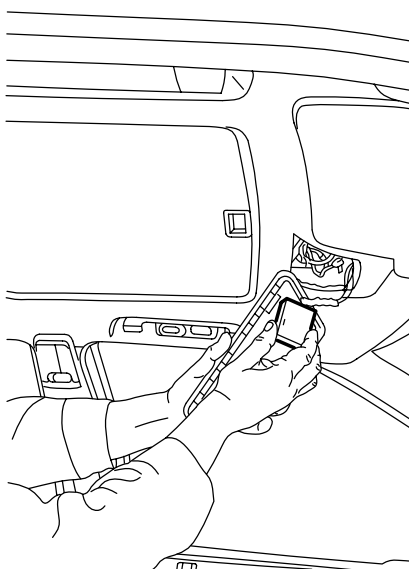

- Fig. : 1 -


Unclip the infra-red locking receiver from its support.

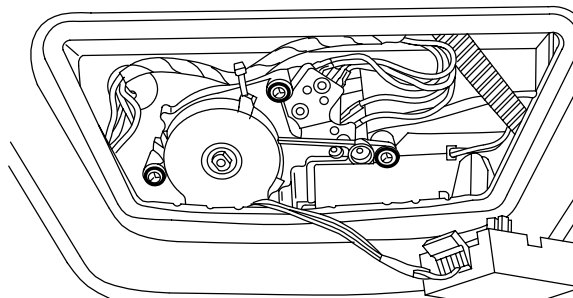

- Fig. : 2 -

Take out the 3 screws.

Liberate the reduction motor.

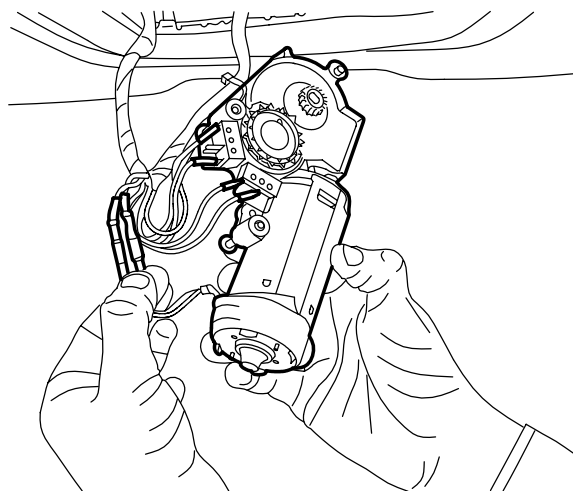


- Fig. : 3 -

Disconnect the connectors.

Remove the reduction motor.

2 Refitting

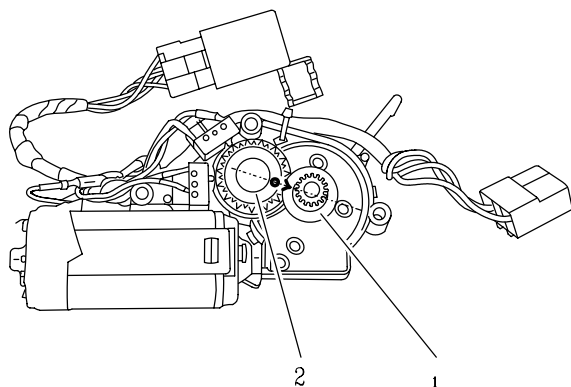

- Fig. : 4 -

Set the motor to the "zero" position.

To do that :

Proceed in the reverse order to removal.